


Operating instructions for user 1401

Important notes for users:

- The default factory code of the lock is 0-0-0-0.
- Be sure to change the factory code to your personal code.
- Remember your personal code or write it down if necessary.
- You can change your personal code as often as you like
- To enter or change the code, the lock must always be in a horizontal position.
- When the lock is opened, the code displayed is automatically changed to automatically blurred to 0-0-0-0
- The code does not need to be re-entered to close the lock.
- If you have forgotten or lost your personal code, please contact the administrator of your locker, who can reset your lock to factory settings, so that you can programme in a new code.
- Make sure that objects in the cabinet do not interfere with the rotation of the locking bolt.

Padlock -----> open-----> close

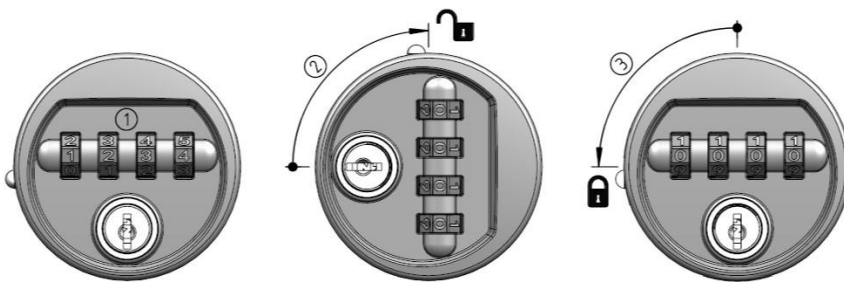


1. Enter valid code
(if programmed)

2. Turn the lock as
possible (code blurred
to 0-0-0-0)

3. Turn back the lock until it
engages

Program / change personal code

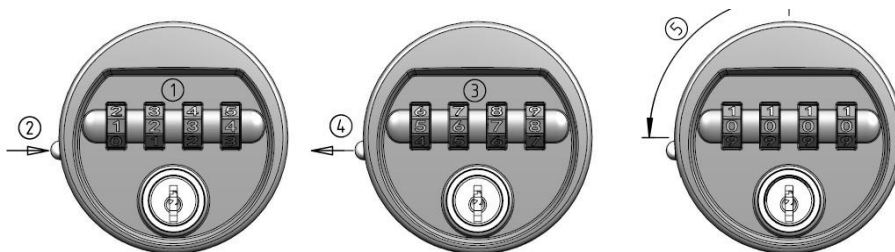

1. Enter valid code
(factory code 0-0-
0-0)

2. Press the code
button and hold

3. Enter new code
4. Release the code
button (code is
stored, remember
it well!)

5. Open and close lock
(code blurred to 0-0-0-0)
